

Cabinet Legs Installation Guide




Timberline

CABINET LEG INSTALLATION INSTRUCTIONS

1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.


Note: Cabinet must be mounted to wall. Legs are decorative, not functional.

ARROW LEG TEMPLATE

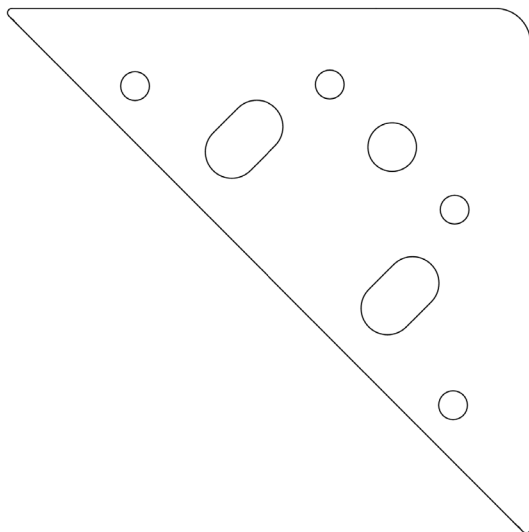

Arrow 5 3/4"

ANGLED LEG TEMPLATE

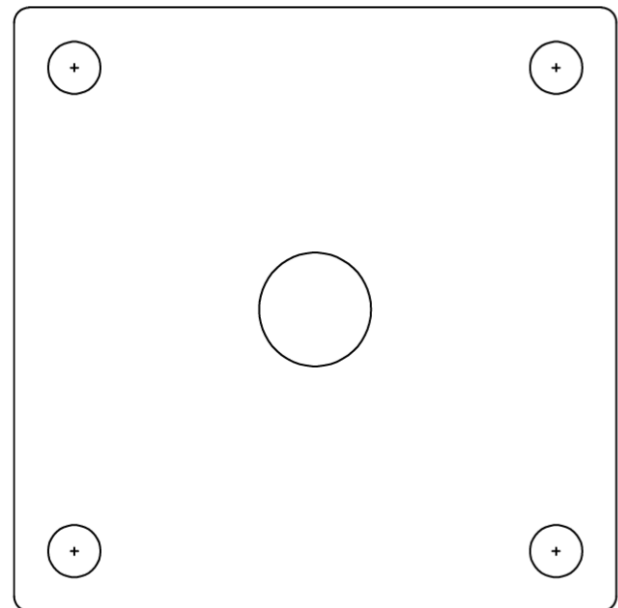

Angled 7 3/4"

*Legs are for decorative purposes only and linen closets and vanities must be fixed to the wall. Use appropriate hardware for the type of wall and insure they are rated for the weight you intend to bear.


Timberline

CABINET LEG INSTALLATION INSTRUCTIONS

1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.

Note: Cabinet must be mounted to wall. Legs are decorative, not functional.

STRAIGHT LEG TEMPLATE

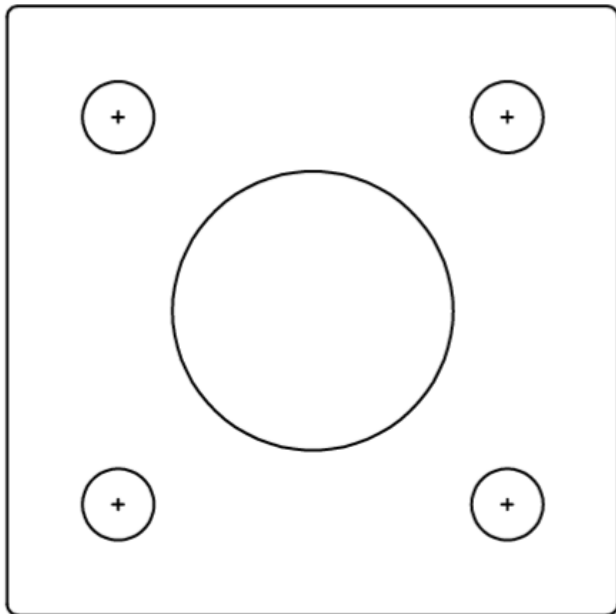

Straight 5 3/4"