# Timberline

# Cabinet Installation Guide



# **Installation Instructions**

#### FIRST THINGS FIRST!

BEFORE proceeding with installation, please check goods carefully. If goods are incorrect, faulty or damaged, DO NOT proceed with installation and contact Timberline immediately. No claims for damages or defects will be accepted after installation. This product must be installed by a licensed tradesperson.

There may have been some movement in transportation and installation which could cause cabinet doors or drawers to become unaligned. It is the responsibility of the installer to make any adjustments required after installation.




# IMPORTANT! THIS PRODUCT MUST BE INSTALLED BY A LICENSED TRADESPERSON.

## 1. ENSURE YOUR WALL IS FLAT & PLUMB


Before starting, check that your wall is level and flat. If not, the cabinet will need to be shimmed out so that it is sitting level, otherwise the cabinet will twist, causing the doors and drawers to be out of alignment and not function correctly.

It is recommended that you do NOT tile in your cabinets – tiles should extend behind the cabinet and clearance allowed for doors and drawers to open (filler panel required where cabinet is going hard against a wall).

It is recommended that vanities are installed over 12" from any wet area such as baths, spas and showers.

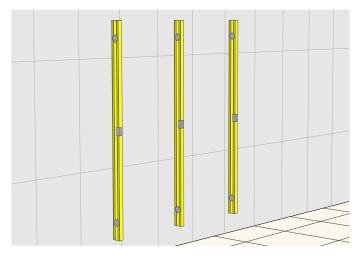



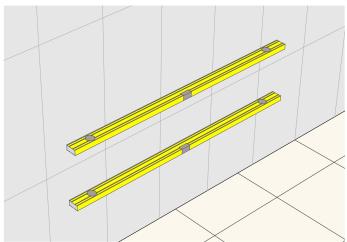

Ensure wall is flat (no gaps between wall and level)

www.timberlinebp.com

## 2. FIX YOUR CABINET / MIRROR, MAKING SURE IT IS LEVEL & STRAIGHT

Fix your cabinet using screws through the solid back of the cabinet. The screws should be suited to the stud material and have a pan or counter sunk head. Provide a horizontal row of screws within 4" vertically from the top of the cabinet at a maximum of 12" horizontal spacing. The screws closest to the left and right edge of the cabinet should be within 4" of each side.


For vanities, ensure that the cabinet is level in all directions, using a spirit level. If not remove the cabinet and shim or straighten the wall accordingly. DO NOT install the top until you are sure that the cabinet is level in all directions.



Vanities: Check cabinet is level




Vanities: Fix as noted above

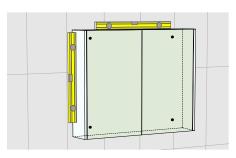


**Mirrored Cabinets:** Fix with suitable screws in each corner and check that cabinet is level.



**Linen Closets:** Fix with suitable screws in each corner and check that cabinet is level

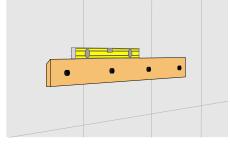

**Mirrors:** Fix mounting batten with suitable screws with maximum 12" spacing

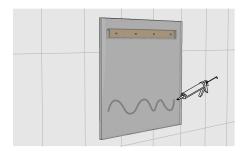

**Mirrors:** Hang mirror on mounting batten and secure with silicone

## 3. ADJUST THE DOORS & DRAWERS

After installation every cabinet will need some adjustment as the doors and drawers move during transport and installation. The cabinet MUST be level before adjustments are made. It is the responsibility of the installer to ensure these adjustments are done correctly. No warranty claims will be considered until this adjustment process is completed. Refer to the instructions below.

#### 4. FIT THE TOP & SEAL CABINET

For vanities, fit the top to the cabinet using a thin bead of non-acidic silicone on all four edges. Seal all cabinet edges against floor and wall to prevent water penetration.

Overtightening of the waste can lead to stress and damage to the sink or top. We recommend that the wastes be tightened by hand only, and then silicone sealed.


## 5. SOMETHING NOT QUITE RIGHT?

If you have a problem - and have carefully checked all the steps above to ensure it has been done right - give us a call. We'll be glad to help. To make it easy for us, please email some photos of the problem and of the job detail label (this can be found on the underside of a drawer base) to **service.usa@timberlinebp.com** including photos of the levels as shown in Step 1 and Step 2 above.


# **Timberline**

## DRAWER FRONT HEIGHT ADJUSTMENT

 Turn top screws anticlockwise (quarter turn) to unlock the drawer front on both sides.











 Turn bottom screw using small adjustments to adjust the drawer front up and down. Anticlockwise adjusts down, clockwise adjusts up. This may need to be completed on both sides of the drawer.

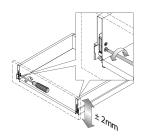


 Turn top screws clockwise (quarter turn) to lock the drawer front back in place on both drawer sides.

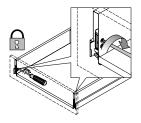



#### DRAWER FRONT TILT ADJUSTMENT

 Locate adjustment screws at the rear of drawer sides (for 122mm and 186mm sided drawers).

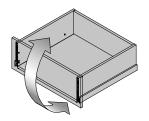


 Adjust using small turns – turning towards the rear of the drawer tilts to the rear, turning towards the front of the drawer tilts to the front.






#### HORIZONTAL DRAWER FRONT ADJUSTMENT


Push metal tabs back using index fingers.



2. With tabs pushed back adjust drawer front left or right using palms of hands.




Release tabs to lock drawer front position



## **Timberline**

#### REMOVING THE DRAWER


1. Open drawer to full extension.

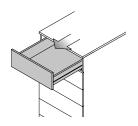

Grasp the underside of the drawer front and lift drawer off the runner.




 To replace, place drawer back on runner and push fully closed. You will hear a click as the drawer is secured.



#### REMOVING THE DRAWER FRONTS

1. Open drawer to full extension.

(On any drawer over 30", loosen the cam-lock screws using a quarter turn under the drawer base.)




- 3. Gently pull drawer front away from drawer.
- To replace, clip angled brackets into bottom of mechanism and push drawer front back on securely, using downward motion.


(On any drawer over 30", tighten the cam-lock screws under the drawer base.)

## ADJUSTMENT OF DOOR HINGES


 Use the front screw for left or right adjustment.




Loosen two bracket screws to slide door up or down. Tighten screws.



Use the back screw for in or out adjustment.



 To remove door (if required) pull the clip at the back of each hinge.



Got a question? We're here to help! If you would like to know more about any of our products give our friendly Customer Care Team a call or visit our website today.